Внимание!

Если вы не уверены в своих способностях в прошивке смартфона советуем вам обратиться в один из наших сервисных центров для выполнения этой операции с помощью наших специалистов. Список авторизованных нами сервисных центров можно посмотреть у нас на сайте <u>http://qumo.ru</u>

Данная инструкция предназначена для проведения процесса перепрошивки телефона QUMO Push 245.

1. Убедитесь, что телефон заряжен не мене чем на 50% перед проведением операции по перепрошивке. (Если у Вас нет возможности убедиться в 50% заряде устройства, то перед проведением процесса перепрошивки подключите устройство к ЗУ и заряжайте не менее получаса)

- 2. Сохраните все свои данные с устройства на жесткий диск компьютера.
- 3. Распакуйте архив с ПО скачанный с сайта.
- В архиве должны находится три папки:
- FW (папка файлами необходимыми для проведения перепрошивки)
- -FlashTool (папка с программой для проведения процесса перепрошивки)
- Driver (папка с драйверами нцеобходимые для проведения процесса перепрошивки)

4. Если процесс перепрошивки проводится первый раз на этом ПК, то потребуется установка драйверов (**В противном случае переходите сразу к следующему пункту** инструкции по перепрошивке). Для этого необходимо открыть папку «Driver_Auto_Installer» и запустить файл – Install.bat (подтвердите внесение изменений и дождитесь завершения установки драйверов и закройте окно установщика)(Если процесс

установки не завершился, запустите вручную файл «InstallDriver.exe» из папки «Feature_phone_drivers»).

ВАЖНО. Отключите и отсоедините все неиспользуемые в данный момент USBустройства: флэшки, USB-модемы, USB-гарнитуры или стереосистемы. Большое количество подключенных к ПК USB-устройств может стать причиной того, что компьютер не распознает новое устройство – Ваш телефон. Старайтесь для прошивки устройства использовать USB порты, расположенные на задней панели Вашего ПК.

5. Откройте папку FlashTool и запустите файл «Flash_tool.exe»

<u>ВАЖНО.</u> Для корректной работы программы для обновления необходимо наличие прав администратора у учетной записи на ПК. На Win 7 необходимо принудительно запускать программу для обновления от имени администратора.

	ConsoleMode_v3_4.xsd	10.01.2013 21:56	Файл "XSD"	9 KБ
	ConsoleMode_v4_0.xsd	28.05.2013 16:52	Файл "XSD"	20 KE
	DualTalkSwitchTool exe	24.04.2013 17:18	Приложение	484 KE
I	😚 Flash_tool.exe	18.06.2014 14:28	Приложение	2 808 KE
	E Flash_tool.ivi	17.04.2015 17:54	Параметры конф	11 KB
	🚳 FlashToolLib.dll	23.04.2013 18:50	Расширение при	1 179 KE
	🚳 gps_brom.dll	16.01.2012 16:39	Расширение при	240 КБ
	gps_DA.bin	16.01.2012 16:39	Файл "BIN"	13 KE
	🚳 META_DLL.dll	12.09.2013 17:06	Расширение при	3 664 KB
	an	16 01 2012 16:20	D	150 VF

Появится интерфейс программы для обновления:

File <u>A</u> ctions <u>O</u> Download Read B	ptions <u>W</u> indow ack Memory Tes	Help t					
Download Agent	Scatter/Config File	Auth File	Cert File	🗃 RootCert File	😲 Format	C≥ Download	⊘ Stop
) ownload Agent	G:\xxx\fw\Smartpl	none and Mobilephor	nes\mobilephones	\Push 245\на сайт\Fla	ashTool\MTK_AllIr	nOne_DA.bin	Bootinatier
catter File	_2015_04_17\VSI	JN61A_11C_PCB01	_gprs_MT6261_S	00.QUMO_PUSH_245	_V07_2015_04_11	7.bin\VSUN61A_11C	C_BB.cfg
uthentication File							BootBOM
Certificate File							USB
lootCert File							Download
Name	Begion addr	ess Begin address	End address	Location			
	0v70006000	0v70006000	0v7000839B	G:\vvv\fw\Smartphor	e and Mobilephor	es\mobilephones\Pr	ush 245\011M0_PUSH_24
 ✓ ARM_BL ✓ ARM_EXT_BL ✓ PRIMARY_MAU ✓ VIVA ✓ VIVA 	0x7000600 0x10006000 II 0x1002000 0x1032C684	0x70006000 0x10006000 0x10020000 0x1032C6B4	0x70008398 0x1000F688 0x1032C2B3 0x1063CDB3	G:\xxx\fw\Smartphor G:\xxx\fw\Smartphor G:\xxx\fw\Smartphor	ne and Mobilephor ne and Mobilephor ne and Mobilephor	nes\mobilephones\Pu nes\mobilephones\Pu nes\mobilephones\Pu nes\mobilephones\Pu	ush 245\QUMO_PUSH_24 ush 245\QUMO_PUSH_24 ush 245\QUMO_PUSH_24 ush 245\QUMO_PUSH_24
 ✓ ARM_BL ✓ ARM_EXT_BL ✓ PRIMARY_MAU ✓ VIVA ✓ VIVA 	0x7000600 0x10006000 0x10020000 0x1032C684	0x70006000 0x10006000 0x10020000 0x1032C6B4	0x7000839B 0x1000F68B 0x1032C2B3 0x1063CDB3	G:\xxx\fw\Smartphor G:\xxx\fw\Smartphor G:\xxx\fw\Smartphor G:\xxx\fw\Smartphor	ne and Mobilephor ne and Mobilephor ne and Mobilephor	nes\mobilephones\Pu nes\mobilephones\Pu nes\mobilephones\Pu nes\mobilephones\Pu	ush 245\QUM0_PUSH_24 ush 245\QUM0_PUSH_24 ush 245\QUM0_PUSH_24 ush 245\QUM0_PUSH_24
 ✓ ARM_BL ✓ ARM_EXT_BL ✓ PRIMARY_MAU ✓ VIVA ✓ VIVA 	0×7000600 0×10006000 I 0×1002000 0×1032C684	0x70006000 0x10006000 0x10020000 0x1032C6B4	0x7000839B 0x1000F68B 0x1032C2B3 0x1063CDB3	G:\xxx\fw\Smartphor G:\xxx\fw\Smartphor G:\xxx\fw\Smartphor G:\xxx\fw\Smartphor	ne and Mobilephor ne and Mobilephor ne and Mobilephor	nes\mobilephones\Pu nes\mobilephones\Pu nes\mobilephones\Pu nes\mobilephones\Pu	ush 245\QUMO_PUSH_24 ush 245\QUMO_PUSH_24 ush 245\QUMO_PUSH_24 ush 245\QUMO_PUSH_24

6. Первоначально необходимо указать Download Agent file, для этого необходимо нажать на иконку «Download Agent File» и указать путь к файлу "MTK_AllInOne_DA.bin" (он находится в корне папки FlashTool)

File Actions	Ontions Windo	ow Help					
Download Read	Back Memory T	est					
Download Agent	Scatter/Config F	ile Auth File	😅 Cert File	Para Para Para Para Para Para Para Para	C) e Format	⊘ Download	Ø Stop
Download Agent	G:\xxx\fw\Smar	tphone and Mobilep	hones\mobilephones'	\Push 245\на саі	π\FlashTool\MTK_AllIn	One_DA.bin	Bootlaader
Scatter File	_2015_04_17\V	/SUN61A_11C_PCE	01_gprs_MT6261_S	00.QUMO_PUSH	_245_V07_2015_04_17	.bin\VSUN61A_1	1C_BB.cfg
Authentication F	🗘 Open Downle	oad Agent File				×	BootROM
Certificate File RootCert File	Папка	FlashTool		-	⇐ 🗈 💣 📰 ▾	Tue	USB
Name ARM_BL	Недавние	doc			20.04.2015 10:01 16.01.2012 16:39	Тип Папка с ф Файл "BIN	Push 245\QUM0_PUSH_245_
✓ ARM_EXT_ ✓ PRIMARY_ ✓ VIVA		MTK_AllIn	Dne_DA.bin		18.06.2014 14:18	Файл "BIN	Nush 245\QUM0_PUSH_245_` Push 245\QUM0_PUSH_245_` Push 245\QUM0_PUSH_245_`
	Рабочий стол						
	(Малькотер) Компьютер						
		•				,	
	Сеть	Имя файла: Тип файлов:	MTK_AllInOne_DA	A.bin		Отмена	-
				0%			
		NOR Search	ing 460800 bps				
							11

7. Далее необходимо указать путь к папке с файлами для прошивки, к папке "FW". Для этого необходимо нажать на иконку "Scatter/Config File" и далее выбрать папку "FW"-«fw»- и указать файл с расширением .cfg

🔒 FlashTool							
File Actions	Options Windo	ow Help				an a	
Download Read	d Back Memory T	est					
Download Agent	E Boatter/Config Fi	ile Auth File	😅 Cert File	Parit File ■	😳 Format	C≇ Download	⊘ Stop
Download Agent	G:\xxx\fw\Smar	tphone and Mobile	phones\mobilephones\	Push 245\на сайт\F	lashTool\MTK_AllIr	nOne_DA.bin	Boothauler
Scatter File	_2015_04_17\V	SUN61A_11C_PC	B01_gprs_MT6261_S0	0.QUMO_PUSH_24	5_V07_2015_04_1	7.bin\VSUN61A_1	1C_BB.cfg
Authentication F	f Open Scatter	File				X	BootROM
Certificate File	Папка:	🔒 fw		• 🗧	• 🗈 💣 📰 •		USB
RootCert File	Æ	Имя	<u>^</u>	Л;	ата изменения	Тип	Download
Name	2	backup		20	.04.2015 10:02	Папка с ф	
ARM_BL	Недавние места	VSUN61A_	11C_BB.cfg	17	.04.2015 15:22	Файл "CF	Push 245\QUMO_PUSH_245_\
PRIMARY_			Тип: Файл "CFG"				Push 245\QUM0_PUSH_245_
VIVA	Рабочий стол		Размер: 2,96 КБ	7 04 2015 15:22			Push 245\QUM0_PUSH_245_'
			data inswerterius. 1	1.04.2013 13.22			
	Библиотеки						
	Компьютер						
	Normbiorep						
		•	III			(A THE REAL PROPERTY OF	
	Сеть	Имя файла:	VSUN61A_11C_B	B.cfg	-	Открыть	
		Тип файлов:	Scatter/Config File	(*.txt, *.cfg)	-	Отмена	•
				U%			
		NOR Searc	hing 460800 bps				n:
							1

8. Далее необходимо указать правильные параметры для проведения процесса перепрошивки. Для этого необходимо выбрать пункт "Options" – и кликнуть (поставить галочку) по пункту «USB Download Without Battery». Далее снова выберите пункт «Options» - Upload – Download/Format->Upload

FlashTool	Downio						
File Actions	Options Window	Help					
Download Rea	Baudrate		•				
2	COM Port			1	0	R	0
Download Ager	 USB Download/ USB Download/ 	Readback ReadBack (Data	a Card)	RootCert File	Format	Download	Stop
)ownload Agent	USB Download/	ReadBack (Exte	rnal Modem)	\Push 245\на сайт\Fl	ashTool\MTK_AllIr	nOne_DA.bin	Bootlaatle
catter File	Send RootCert F	orcibly		Push 245\на сайт\P	W\fw\VSUN61A_1	I1C_BB.cfg	USB
	USB Download)	Without Batten					Downtoat
Cartificate File	Operation Weth	iods					BootROM
	Transmission O	ptions	•				Download
footCert File	Baseband Chip	Options	•	-			
	Format FAT (Dis	abled)		Location			L DIELLE COMPAGN
ARM_BC	Backup and Res	tore (No Action	ı)	G:\xxx\fw\Smartpho	ne and Mobilephor ne and Mobilephor	res\mobilephones\Pus	n 245\на сайт\FW\fw\ h 245\на сайт\FW\fw\
PRIMARY_N	Upload (No Upl	oad)		G:\xxx\fw\Smartpho	ne and Mobilephor	nes\mobilephones\Pus	h 245\на сайт\FW\fw\
VIVA	FAT Range Che	Action) ck Before Down	heal	G:\xxx\fw\Smartpho	ne and Mobilephor	nes\mobilephones\Pus	h 245\на сайт\FW\fw\
	Backup Linux N	VRAM Partition	1080				
	NOR/SF Flash Si	afe Mode					
L.,				_			
1				III			
Parameters	Information						
	addr(0x0000		P WBITE				
			1	0%			
	N	IOR Search	1ing 460800 bp	0%			
	N	IOR Search	ning 460800 bp	0%			
FlashTool	N	IOR Search	ning 460800 bp	0% 5			
FlashTool le Actions 0	N ptions] Window	IOR Search Help	iing	0%			
FlashTool le Actions O ownload Rec	N ptions] Window Baudrate	IOR Search Help	ning 460800 bp	0%			
FlashTool le Actions O ownload Rea	ptions] Window Baudrate COM Port	IOR Search Help	ning 460800 bp	0%	0	2	Ø
FlashTool le Actions O ownload Rec Jownload Ager	ptions] Window Baudrate COM Port USB Download/R	IOR Search Help eadback	ning 460800 bp	0% s	Q Format	Ci Download	Contraction of the second seco
FlashTool le Actions O ownload Rea Pownload Ager	ptions) Window Baudrate COM Port USB Download/R USB Download/R USB Download/R	IOR Search Help eadback eadBack (Data (ning 460800 bp • • Card)	0% s Antonia Cartonia	Pormal shToolVMTK_Allin(Ci Download Dne_DA.bin	Stop
FlashTool e Actions O ownload Rec rownload Agert wnload Agent atter File	ptions) Window Baudrate COM Port USB Download/R USB Download/R USB Download/R Send RootCert Fo	IOR Search Help eadback eadBack (Data (eadBack (Extern rcibly	ning 460800 bp , , Card) nal Modem)	0% s RootCert File Push 245\ma caim\Fla Push 245\ma caim\Fla	Format shTool/MTK_Allin('\fw\VSUN61A_11	Cu Download Dne_DA.bin C_BB.cfg	Stop
FlashTool le Actions O ownload Res Download Agent winload Agent atter File	ptions) Window Baudrate COM Port USB Download/R USB Download/R USB Download/R Send RootCert Fo	IOR Search Help eadback eadBack (Data (eadBack (Extern rcibly	ning 460800 bp , , Card) nal Modem)	0% s RootCert File Push 245\via cairr\FW	CO Format shToolVMTK_Allin(Virw\VSUN61A_11	Cu Download Dne_DA.bin C_BB.cfg	Stop
FlashTool e Actions O ownload Rea rownload Agent atter File thentication Fil	ptions Window Baudrate COM Port USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho	IOR Search Help eadback eadBack (Data (eadBack (Extern rcibly 'ithout Battery de	ning 460800 bp (A60800 bp (A60800 bp (A60800 bp) (A60800 bp) (A608	0% s Anno Anno Anno Anno Anno Anno Anno Ann	C Format shToolVMTK_AllInC \fw\VSUN61A_11	Ou Download Dne_DA.bin C_BB.cfg	Stop Bootladder Dowilladd Bootladder
FlashTool le Actions O ownload Rea bownload Agent atter File thentication Fil titlicate File	N Ptions Window Baudrate COM Port USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho Transmission Opt	IOR Search Help eadback eadBack (Data (eadBack (Extern rcibly ithout Battery ds ions	ning 460800 bp (A60800 bp (A60800 bp (A60800 bp) (A60800 bp) (A608	0% s RootCert File Push 245\Ha caim\FW	Format shTool\MTK_AllInC Viw\VSUN61A_11	Ca Download Dne_DA.bin C_BB.cfg	Stop Bootlander Bootlander Bootlander LSB Bootlander
FlashTool e Actions O ownload Rea lownload Agent atter File thentication Fil tificate File otCert File	N Ptions Window Baudrate COM Port USB Download/R USB Download/R USB Download/R USB Download/W Operation Metho Transmission Opt Baseband Chip O	IOR Search Help eadback eadBack (Data (eadBack (Data (eadBack (Extern rcibly ithout Battery ds tions ptions	ning 460800 bp (A60800 bp (A60800 bp (A60800 bp (A60800 bp) (A60800 bp) (A6080	0% s RootCert File Push 245\Ha caim\Fla	Format shTool/MTK_AllInC	Ca Download Dne_DA.bin C_BB.ofg	Stop Bootlaater Downloat USB Downloat
FlashTool e Actions O ownload Rea ownload Agent atter File hentication Fil tificate File otCett File ame	ptions Window Baudrate COM Port USB Download/R USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho Transmission Otho Transmission Otho Format FAT (Disa	IOR Search Help eadback eadBack (Data (eadBack (Data (eadBack (Extern rcibly ithout Battery ds tions ptions bled)	ning 460800 bp Card) nal Modem)	0% s I RootCert File Push 245\Ha caim\Fla Location	Format shTool/MTK_AllIn('\tw\VSUN61A_11	Download Download Dne_DA.bin C_BB.ofg	Stop Stop Bootingfer Usp Download
FlashTool e Actions O wwnload Rea ownload Agent atter File chentication Fil tificater File otCert File ame ARM_BL	Ptions Window Baudrate COM Port USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho Transmission Opt Baseband Chip O Format FAT (Disa Backup and Resto	IOR Search Help eadback eadBack (Data (eadBack (Data (eadBack (Extern rcibly ithout Battery ds tions ptions bled) yre (No Action)	ning 460800 bp	0% s I RootCert File Push 245\Ha caim\Fla Ush 245\Ha caim\Fla Location G:\xxx\fw\Smattphon	Format shTool/MTK_AllInC VMV/SUN61A_11	Download Doe_DA.bin C_BB.cfg	Stop Stop Bootland Bootland USB Download 245\ua cairt\FW\fw\fw
FlashTool e Actions O wwnload Ager wmload Ager wmload Agert atter File tificate File ame ARM_BL ARM_BL ARM_EXT_E PRIMARY N	ptions) Window Baudrate COM Port USB Download/R USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho Transmission Opt Baseband Chip O Format FAT (Disa Backup and Resto Upload (Downlos	IOR Search Help Help eadback eadBack (Data (eadBack (Data (eadBack (Extern rcibly ithout Battery ds tions ptions bled) re (No Action) d/Format -> U	ning 460800 bp Card) nal Modem) pload) •	0% s I RootCert File Push 245\Ha caim\Fila Location G:\xxx\fw\Smartphon No Lloload	Format shTool/MTK_Allin(\fw\VSUN61A_11	Download Download Dne_DA.bin C_BB.cfg	Stop Stop 245\wa cairr\FW/Iw/ 245\wa cairr\FW/Iw/ 245\wa cairr\FW/Iw/
FlashTool Actions O wwnload Rea wnload Agent atter File hentication Fil tificate File ame ARM_BL ARM_BL ARM_BL PRIMARY_N	ptions) Window Baudrate COM Port USB Download/R USB Download/R USB Download/R USB Download/R USB Download W Operation Metho Transmission Opt Baseband Chip O Format FAT (Disa Backup and Reste Upload (Downloa Multi-Load (No A	IOR Search Help Help eadback eadBack (Data (eadBack (Data (eadBack (Extern rcibly thout Battery ds tions ptions bled) re (No Action) d/Format -> U uction)	ning 460800 bp Card) nal Modem)	0% s I RootCert File Push 245\Ha caim\Fla Location G:\xxx\fw\Smartphon No Unload Download/Forma	Format shTool/MTK_Allin(\fw\VSUN61A_11 e and Mobilephone t -> Upload	Download Download Dne_DA.bin C_BB.cfg ss\mobilephones\Push \mobilephones\Push \mobilephones\Push	Stop Stop 245\Ha cair/FW/IW/ 245\Ha cair/FW/IW/ 245\Ha cair/FW/IW/
FlashTool e Actions O ownload Ager winload Ager winload Agert atter File hentication Fil tificate File otCert File ame ARM_BL ARM_BL PRIMARY_L VIVA	ptions Window Baudrate COM Port USB Download/R USB Download/R USB Download/R USB Download/R USB Download W Operation Metho Transmission Opt Baseband Chip O Format FAT (Disa Backup and Reste Upload (Downloa Multi-Load (No A FAT Range Check	IOR Search Help Help eadback eadback (Data (eadback (Data (eadback (Data (eadback (Extern rcibly ithout Battery ds tions ptions bled) re (No Action) d/Format -> U uction) : Before Downlo	ning 460800 bp Card) nal Modem) pload) • paad	0% s ProotCert File Fush 245\Ha caim\Fla Location G:\xxx\fw\Smatphon Download/Forma Upload Only	Format shTool/MTK_AllinC \fw\VSUN61A_11 e and Mobilephone t-> Upload	Download Download Jne_DA.bin C_BB.cfg ss\mobilephones\Push \mobilephones\Push \mobilephones\Push	Stop Stop 245\ha calin\FW\fw\ 245\ha calin\FW\fw\ 245\ha calin\FW\fw\fw\ 245\ha calin\FW\fw\fw
FlashTool Actions O wwnload Rea ownload Agent atter File hentication Fil tificate File ame ARM_BL ARM_BL ARM_BL PRIMARY_N VIVA	ptions) Window Baudrate COM Port USB Download/R USB Download/R USB Download/R USB Download/R USB Download W Operation Metho Transmission Opt Baseband Chip O Format FAT (Disa Backup and Reste Upload (Downloa Multi-Load (No A FAT Range Check Backup Linux MV NOR/SF Flach Sef	IOR Search Help Help eadback eadback (Data (eadback (Data (eadback (Cata (cataback (Cata (cataback (eadback (eadback (cataback (eadback (eadbach (eadback (eadbach (ning 460800 bp Card) nal Modern) ,,, , , , , , , , , , , , , , , , , ,	0% s I RootCert File Fush 245\Ha caim\Fla Location G:\xxx\fw\Smartphon Download/Forma Upload Only	Format shTool/MTK_AllinC \fw\VSUN61A_11 e and Mobilephone t-> Upload	Download Download Jne_DA.bin C_BB.cfg ss\mobilephones\Push \mobilephones\Push \mobilephones\Push	Stop Stop 245\\Ha cality\FW\fw\\ 245\\Ha cality\FW\fw\\ 245\\Ha cality\FW\fw\\ 245\\Ha cality\FW\fw\\
FlashTool e Actions O wwnload Ager wnload Agert atter File hentication Fil tificate File are ARM_BL ARM_BL ARM_BL ARM_BL ARM_BL VIVA	N ptions Window Baudrate COM Port USB Download/R USB Download/R USB Download/R Send RootCert For USB Download W Operation Metho Transmission Opf Baseband Chip O Format FAT (Disa Backup and Restor Upload (Download Workson Communication Multi-Load (No A FAT Range Check Backup Linux NVI NOR/SF Flash Saf	IOR Search Help eadback eadback (Data (eadback (Data (eadback (Chata (eadback (Extern reibly ithout Battery ds tions ptions bled) or (No Action) d/Format -> U (cction) : Before Downlo RAM Partition e Mode	ning 460800 bp Card) nal Modern) pload) b pload) b pload	0% s I RootCert File Push 245\Ha caim\Fla Location G:\xxx\fw\Smatphon Download/Forma Upload Only	Format shTool/MTK_AllinC \fw\VSUN61A_11 e and Mobilephone t-> Upload	Download Download Dne_DA.bin C_BB.cfg s\mobilephones\Push \mobilephones\Push \mobilephones\Push	Z45\Ha cairr\FW\fw\
FlashTool e Actions O wwnload Ager wnload Agert atter File hentication Fil tificate File otCert File ame ARM_BL ARM_BL ARM_BL ARM_EXT_E PRIMARY_N	Ptions Window Baudrate COM Port USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho Transmission Opf Baseband Chip O Format FAT (Disa Backup and Resto Upload (Download Multi-Load (No A FAT Range Check Backup Linux NVI NOR/SF Flash Saf	IOR Search Help eadback eadback (Data (eadback (Data (eadback (Chara cribly fithout Battery ds tions ptions bled) or (No Action) d/Format -> U vction) : Before Downlo RAM Partition e Mode	ning 460800 bp Card) nal Modern) pload) P pload (0% s I RootCert File Push 245\Ha caim\Fla Location G:\xxx\fw\Smartphon Download/Forma Upload Only	Format shTool/MTK_AllinC \fw\VSUN61A_11 e and Mobilephone t-> Upload	Download Download Dne_DA.bin C_BB.cfg es\mobilephones\Push \mobilephones\Push \mobilephones\Push	Z45\Ha cair/FW\fw\
FlashTool e Actions O ownload Ager winload Agert atter File hentication Fil tificate File otCert File ARM_BL ARM_BL ARM_BL ARM_BL ARM_ST VIVA	Ptions Window Baudrate COM Port USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho Transmission Opf Baseband Chip O Format FAT (Disa Backup and Resto Upload (Downloa Multi-Load (No A FAT Range Check Backup Linux NVI NOR/SF Flash Saf	IOR Search Help eadback eadback (Data (eadback (Data (eadback (Chara cribly ithout Battery ds tions ptions bled) ore (No Action) d/Format -> U (ction) : Before Downlo RAM Partition e Mode	ning 460800 bp Card) nal Modem) ,	0% s s RootCert File Push 245\wa cai/r\Fla Push 245\wa cai/r\Fla Location G:\xxxXtw\Smartphon G:\xxxXtw\Smartphon Vol Inload Download/Forma Upload Only	Format shTool/MTK_AllinC \/w/VSUN61A_11 e and Mobilephone	Download Download Dne_DA.bin C_BB.cfg es\mobilephones\Push \mobilephones\Push \mobilephones\Push	Stop Stop Bowfload USB Dowfload USB Dowfload 245\Ha caim\FW\fw\L 245\Ha caim\FW\fw\L
FlashTool le Actions O ownload Rec Jownload Agent atter File thenticate File lotCert File 2 ARM_BL 2 ARM_BL 2 ARM_EXT_1 PIIMARY_N 2 VIVA	ptions) Window Baudrate COM Port USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho Transmission Opf Baseband Chip O Format FAT (Disa Backup and Rest Upload (Downloa Multi-Load (No A FAT Range Check Backup Linux NVI NOR/SF Flash Saf	IOR Search Help eadback eadback (Data (eadback (Cata (eadback (Cata (eadback (Cata (catbox)))) fithout Battery ds tions ptions bled) ore (No Action) d/Format -> U (ction) e Before Downlo RAM Partition e Mode	ning 460800 bp Card) nal Modern) , b pload) b sad	0% s s RootCert File Push 245\wa cairr\Fla Push 245\wa cairr\Fla Location G:\xxx\tw\Smartphon Q Download/ Forma Upload Only	Format shTool\MTK_AllInC vivvVSUN6TA_11 e and Mobilephone t -> Upload	Download Dne_DA.bin C_BB.cfg ss\mobilephones\Push \mobilephones\Push	Stop Stop Bowlinad Boeffich USB Dowlinad 245\Ha caim\FW\fw\\ 245\Ha caim\FW\fw\\ 245\Ha caim\FW\fw\\
FlashTool e Actions O ownload Rea iownload Agent atter File thentication Fil thenticate File otCert File ARM_BL ARM_BL ARM_BL ARM_EXT_E PRIMARY_N VIVA	N Baudrate COM Port USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho Transmission Opf Baseband Chip O Format FAT (Disa Backup and Resto Upload (Download Multi-Load (No A FAT Range Check Backup Linux NVI NOR/SF Flash Saf	IOR Search Help eadback eadback (Data (eadback (Cata (eadback (Cata (eadback (Cata (eadback (Cata (eadback (Cata (fithout Battery ds tions ptions bled) ore (No Action) d/Format -> U) cition e Mode	ning 460800 bp Card) nal Modem) pload) b poad	0% s I RootCert File Push 245\wa caim\Fla Push 245\wa caim\Fla Location G:\wex\fw\Smartphon Upload Only	Format shTool/MTK_AllInC viw/VSUN61A_11 e and Mobilephone t -> Upload	Download Dne_DA.bin C_BB.cfg es\mobilephones\Push \mobilephones\Push	Stop Stop Bowilcad USB Dowilcad USB Dowilcad 245\\Ha cair\FW\\W\V 245\\Ha cair\FW\\W\V 245\\Ha cair\FW\\W\V
FlashTool e Actions O pownload Ager rownload Agert atter File thentication Fil tificate File otCert File ARM_BL ARM_BL ARM_BL PRIMARY_N VIVA VIVA Tarameters OTP	N Baudrate COM Port USB Download/R USB Download/R USB Download/R USB Download/R USB Download W Operation Metho Transmission Opf Baseband Chip O Format FAT (Disa Backup and Restor Upload (Download (No A FAT Range Check Backup Linux NVI NOR/SF Flash Saf	IOR Search Help eadback eadBack (Data (eadBack (Data (eadBack (Cata of the	ning 460800 bp Card) nal Modern) pload) P pload) P cad	0% s I RootCert File Push 245\wa cairr\Fla Push 245\wa cairr\Fla Location G:\xxx\fw\Smartphon Upload	Format shTool/MTK_AllInC e and Mobilephone t -> Upload	Download Dne_DA.bin C_BB.ofg stmobilephones\Push tmobilephones\Push tmobilephones\Push	245\ha cairr\FW\fw\ 245\ha cairr\FW\fw\ 245\ha cairr\FW\fw\
FlashTool e Actions O pwnload Ager rownload Ager wmload Ager titificate File atter F	Nindow Baudrate COM Port USB Download/R USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download/R Send RootCert Fo USB Download/R Baseband Chip O Format FAT (Disa Backup and Restr Upload (Download (No A FAT Range Check Backup Linux NVI NOR/SF Flash Saf Information addt(0x000000	IOR Search Help eadback eadBack (Data (eadBack (Data (eadBack (Data (eadBack (Extern rrcibly fithout Battery ds tions ptions bled) rre (No Action) d/Format -> U (ction) E Before Downlo RAM Partition e Mode 1000, len(0), OTP_	ning 460800 bp Card) nal Modern) pload)) pload /	0% s I RootCert File Push 245\Ha caim\Fla Location G:\xxx\fw\Smartphon Download/Forma Upload Only	Format shToolVMTK_AllInC shToolVMTK_AllInC vfwVVSUN61A_11	Download Dne_DA.bin C_BB.cfg s\mobilephones\Push \mobilephones\Push	245\\Ha cair\FW\\W\\ 245\\Ha cair\FW\\W\\ 245\\Ha cair\FW\\W\\
FlashTool Actions O wwnload Ager ownload Ager wnload Agert stter File hentication Fil tificate File ame ARM_BL ARM_BL ARM_BL ARM_BL ARM_ST_T PRIMARY_N VIVA	N Baudrate COM Port USB Download/R USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho Transmission Opto Transmission Opto Baseband Chip O Format FAT (Disa Backup and Restr Upload (Downloa Multi-Load (No A FAT Range Check Backup Linux NVI NOR/SF Flash Saf	IOR Search Help eadback eadback eadback (Data (eadback (Cata (eadback (eadback (Cata (eadback (eadback (Cata (eadback (ning 460800 bp	0% s I RootCert File Push 245\Ha caim\Fla Location G:\xxx\fw\Smartphon Download/Forma Upload Only III	Format shToolVMTK_AllInC shToolVMTK_AllInC vfwVVSUN61A_11	Download Dne_DA.bin C_BB.cfg s:\mobilephones\Push \mobilephones\Push	245\\Ha caim\FW\\Iw\\ 245\\Ha caim\FW\\Iw\\ 245\\Ha caim\FW\\Iw\\
FlashTool e Actions ownload Ager winload Ager winload Ager winload Ager tificate File cotCert File ame ARM_BL ARM_BL ARM_EXT_E FIIMARY_N VIVA arameters OTP	ptions Window Baudrate COM Port USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho Transmission Opf Baseband Chip O Format FAT (Disa Backup and Rest Upload (Download (Mo A FAT Range Check Backup Linux NVI NOR/SF Flash Saf Information add(0x000000	IOR Search Help eadback eadback eadback(Data (eadback (Data (eadback (Catar) rcribly fithout Battery ds tions ptions bled) pre (No Action) (Afformat -> U (ction) : Before Downlo RAM Partition e Mode 1000, len(0), OTP_ 1000, len(0), le	ning 460800 bp	0% s I RootCert File Push 245\wa cai/r\Fla Push 245\wa cai/r\Fla Location G:\xxx\tw\Smattphon Vol Inload Download/Forma Upload Only	Format shTool\MTK_AllInC viw\VSUNG1A_11 e and Mobilephone t-> Upload	Download Dne_DA.bin C_BB.cfg s\mobilephones\Push \mobilephones\Push	Z45\Ha cairr\FW\fw\\ 245\Ha cairr\FW\fw\\ 245\Ha cairr\FW\fw\\
FlashTool e Actions ownload Ager wnload Agert atter File hentication Fil tificate File ame ARM_BL ARM_BL ARM_EXT_E PRIMARY_N VIVA arameters OTP	ptions Window Baudrate COM Port USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho Transmission Opf Baseband Chip O Format FAT (Disa Backup and Rest Upload (Download Multi-Load (No A FAT Range Check Backup Linux NVI NOR/SF Flash Saf Information add(0x0000000	IOR Search Help eadback eadback eadback(Data (eadback(Chata (eadback(thata (eadback(thata (ning 460800 bp	0% s s RootCert File Push 245\wa cairr\Fla Push 245\wa cairr\Fla Location G:\xxxVtw\Smartphon G:\xxxVtw\Smartphon Vho Linload Download/Forma Upload Only	Format shTool\MTK_AllInC viw\VSUNG1A_11 e and Mobilephone t-> Upload	Download Dne_DA.bin C_BB.cfg s\mobilephones\Push \mobilephones\Push	245\Ha cairr\FW\fw\ 245\Ha cairr\FW\fw\ 245\Ha cairr\FW\fw\
FlashTool e Actions ownload Ager wnload Agert atter File hentication Fil tificate File ame ARM_BL ARM_BL ARM_EXT_E PRIMARY_N VIVA arameters OTP	ptions Window Baudrate COM Port USB Download/R USB Download/R USB Download/R Send RootCert Fo USB Download W Operation Metho Transmission Opf Baseband Chip O Format FAT (Disa Backup and Resto Upload (Download Multi-Load (No A FAT Range Check Backup Linux NVI NOR/SF Flash Saf Information add(0x0000000	IOR Search	ning 460800 bp Card) nal Modem) pload) P pload) P pload (pload (pload (pload (pload (pload (pload (pload () pload	0% s s RootCert File Push 245\wa cairr\Fla Push 245\wa cairr\Fla Location G:\xxx\tw\Smartphon Vol Inload Download/Forma Upload Only	Format shTool\MTK_AllInC viw/VSUNG1A_11 e and Mobilephone t-> Upload	Download Dne_DA.bin C_BB.cfg s\mobilephones\Push \mobilephones\Push	Z45\Ha caim\FW\fw\\ 245\Ha caim\FW\fw\\ 245\Ha caim\FW\fw\\

9. Далее возьмите выключенный телефон, вытащите аккумулятор и подключите к ПК. При первом подключении возможно придется дождаться автоматической установки драйверов (в трее должен будет отобразиться данный процесс), после этого нажмите на кнопку «Download» и должен будет начаться процесс перепрошивки (если он не начался, попробуйте отключить устройство от ПК, далее нажмите на кнопку Stop, потом на Upload и снова подключите устройство к ПК). Следить за ходом перепрошивки можно будет с статус баре.

Flash I ool							
File Actions Or	ptions <u>W</u> indow	Help					
Download Read B	ack Memory Test	1					
Download Agent	Scatter/Config File	Auth File	Cert File	RootCert Fi	😨 e Format	C⊯ Download	⊘ Stop
Download Agent	G:\xxx\fw\Smartpho	one and Mobilephone	es\mobilephones	\Push 245\на са	m\FlashTool\MTK_All	InOne_DA.bin	Bootbader
Scatter File	G:\xxx\fw\Smartphr	one and Mobilephone	es\mobilephones	\Push 245\QUM	_PUSH_245_V05_20)14_12_05 (for old LCD)	WSUN USB
Authentication File							Dowindad
Certificate File							BootROM
BootCert File							Download
Name	Region addre	ss Begin address	End address	Location			
☑ ARM_EXT_BL ☑ PRIMARY_MAU ☑ VIVA	0x10006000 II 0x10020000 0x1032C444	0x10006000 0x10020000 0x1032C444	0x10000F543 0x1032C043 0x1063CAFB	G:\xxx\fw\Sma G:\xxx\fw\Sma G:\xxx\fw\Sma	phone and Mobilepho tphone and Mobilepho tphone and Mobilepho	nes\mobilephones\Pus ynes\mobilephones\Pus ynes\mobilephones\Pus	h 245\QUMO_PUSH_245 h 245\QUMO_PUSH_245 h 245\QUMO_PUSH_245 h 245\QUMO_PUSH_245
A Barameters	Information						
Parameters OTP	Information addr(0x00000	000), len(0), OTP_W	RITE,				•
Parameters OTP	Information addr(0x00000	000), len(0), 0TP_W	RITE, 26% (Downlo	m ad software to fla	h now)		4
Parameters OTP 2007040 Bytes / 326	Information addr(0x00000	000), len(0), 0TP_W	RITE, 26% (Downlo	ad software to fla	-h now] VOR:(64Mb+32Mb)	[GigaDevice] GD25LQ	64

10. Как только процесс перепрошивки завершится, программа для обновления выдаст всплывающее окно, как на скриншоте ниже:

		~	~	~	-		
Download Agent	Scatter/Config File	Auth File	Cert File	RootCert File	😲 Format	C Download	Stop
) ownload Agent	G:\xxx\fw\Smartpho	ne and Mobilephon	es\mobilephones	\Push 245\на сайт\Fl	ashTool\MTK_AllIr	iOne_DA.bin	Bootlaader
acatter File	G:\xxx\fw\Smartpho	ne and Mobilephon	es\mobilephones	\Push 245\QUMO_PU	ISH_245_V05_201	4_12_05 (for old LCD)	WSUN CLUSB
Authentication File							Downinging
ertificate File							BootROM
RootCert File							Download
Name	Region addres	Begin address	End address	Location			
ARM_BL	0x70006000	0x70006000	0x7000839B	G:\xxx\fw\Smartpho	ne and Mobilephon	es\mobilephones\Pus	h 245\QUM0_PUSH_245
ARM_EXT_BL	0x10006000	0x10006000	0x1000F543	G:\xxx\fw\Smartpho	ne and Mobilephon	es\mobilephones\Pus	h 245\QUM0_PUSH_245
		0.4000000	0.10000040				
PRIMARY_MAU	UI UX10020000	0x10020000	0x1032C043	G:\xxx\fw\Smartpho	ne and Mobilephon	es\mobilephones\Pus	h 245\QUMU_PUSH_245
VIVA	0x10020000 0x1032C444	0x10020000 0x1032C444	0x1063CAFB	G:\xxx\fw\Smartpho G:\xxx\fw\Smartpho	ne and Mobilephon ne and Mobilephon	ies\mobilephones\Pus ies\mobilephones\Pus	:h 245\QUMU_PUSH_246 :h 245\QUMO_PUSH_245
VIVA	01 0x1002000 0x1032C444	0x1032C444	0x1053C043 0x1063CAFB	G:\xxx\fw\Smartpho G:\xxx\fw\Smartpho OK	ne and Mobilephon ne and Mobilephon	es (mobilephones \Pus es \mobilephones \Pus	h; 245\UUMU_PUSH_245 h; 245\QUMO_PUSH_245
PHIMARY_MAL VIVA VIVA Parameters OTP	0x1002000 0x1032C444	0x10020000 0x1032C444	0x1032L043 0x1063CAFB	G:\xxxViv/Smartpho G:\xxxViv/Smartpho G:\xxxViv/Smartpho	ne and Mobilephon ne and Mobilephon	es vinobilephones VPus es vinobilephones VPus	h; 245\UUMU_PUSH_245 h; 245\QUMO_PUSH_245
PrimAHY_MAL VIVA Parameters OTP	01 Un10020000 0x1032C444	0x1002000 0x1032C444	Dx1032L043 Dx1063CAFB	G:\xxxViv/Smartpho G:\xxxViv/Smartpho OK Last action we	ne and Mobilephon ne and Mobilephon	es vinoblephones V-us es vinoblephones V-us	h 245\UUMU_PUSH_245 h 245\QUMO_PUSH_245
PHIMAHY_MAL VIVA Parameters OTP	01 0x10020000 0x1032C444	0x10020000 0x1032C444	0x1053CAFB	G:\xxxViv/Smartpho G:\xxxViv/Smartpho OK Last action wa	ne and Mobilephon ne and Mobilephon	es mobilephones (Pus es (mobilephones (Pus	h 245/UUMU_PUSH_245
PHIMAHY_MAL VIVA Parameters OTP	U URIDUCUUUU 0x1032C444	0x10020000 0x1032C444	0x1052C4FB	G:\vex\fw\Smartpho G:\vex\fw\Smartpho OK Last action wa	ne and Mobilephon ne and Mobilephon	es vnoblephones V-us es vnobilephones V-us	h 245\UUMU_PUSH_245 h 245\QUMO_PUSH_245

 Закройте данное окно и программу для обновления. Вставьте аккумулятор в телефон и зажмите кнопку включения до появления изображения на экране. Процесс перепрошивки закончен, дождитесь полной загрузки устройства и можете начать им пользоваться.

Компания QUMO ведет постоянную работу над совершенствованием программного обеспечения своих устройств. С каждой новой прошивкой расширяется функционал устройств, увеличивается количество лицензионных приложений, оптимизируется энергопотребление и улучшается стабильность работы.

Мы настоятельно рекомендуем Вам обновлять ПО Ваших устройств.

Информация о выходе прошивок и само ПО находится в открытом доступе на сайте <u>www.qumo.ru</u>