



1080P  
H.264  
FULL HD

**SPORTS**  
**HD DV** water resistant  
30M



## Warning

- 1 It is a high-precision product, do not fall or crash.
- 2 Do not expose the unit to strong magnetic objects, such as magnet and electrical motor. Avoid strong radio waves. Strong magnetic fields may cause the products breakdown or images and sounds damage.
- 3 Never leave the products exposed to high temperatures and direct sunlight.
- 4 Please choose branded Micro SD card. Neutral cards are not guaranteed to work normally.
- 5 Do not place Micro SD card near strong magnetic objects to avoid data loss.
- 6 In case of overheating, smoke, or unpleasant smell in the process of charging, unplug your device immediately to prevent fire hazard.
- 7 While it is charging, keep the product out of children's reach. Power line may cause children accidental suffocation or electric shock.
- 8 Keep the device in cool, dry and dust-proof places.

## Preface

This product is a high-definition digital motion video recording device tailored to market demand. It has a variety of industry-leading features including digital video recording, photo shooting, audio recording, video display and detachable battery, which makes it perfect for vehicle data recording, photo-shooting, outdoor sports, home security, deep-water probing, etc., allowing you to film at anytime, anywhere. And it has a variety of patents.

Multipurpose

 
 


Car recorder Outdoor sports Water sports Cheng Home Durgla

## Product Features

- >A water-resistant casing that allows you to film fascinating water sports; water-resistant up to 30 meters under water
- >High definition screen that displays and replays fascinating videos recorded
- >Detachable battery that is easy to replace and prolongs your camera's service life
- >Video recording while charging
- >Video recording with battery
- >12-megapixel HD wide-angle lens
- >HDMI HD output
- >Web camera
- > Support storage cards up to 32GB maximum
- > Multiple video recording formats: 1080P / 720P / WVGA
- > Recorded in MOV format
- >Multiple photo shooting modes: Single shot, Snapper
- > Video encryption enabled
- > Mini appearance, diversified colors available

## Picture of product

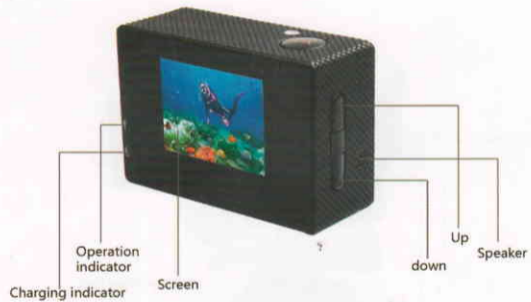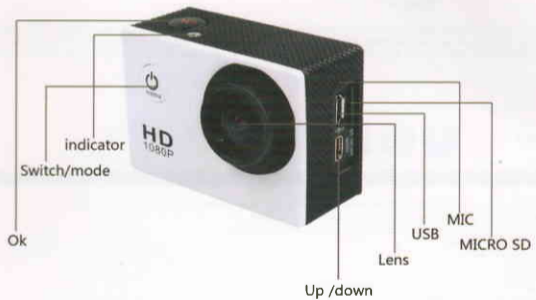



Battery cover



Battery cover lock



## Picture of waterproof case


    
# Picture of Accessories

				
Waterproof case	bicycle stand	base 1	base 2	clip
				
Fixed base	switch support 1	switch support 2	switch support 3	adapter
				
Helmet base	bandage	ribbon	3M adhesive tape	wire rope
				
Data wire	charger	manual	wiper	

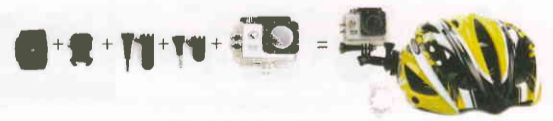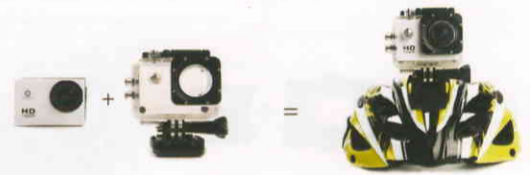

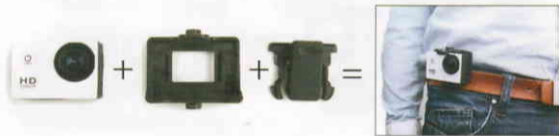

### 1. Inserting Micro SD Card

Note: Please choose branded Micro SD card and format it on computer before use. Neutral cards are not guaranteed to work normally.

### 2. Installing and removing batteries

- Press on battery cap to open it.
- Correctly install battery into camera as indicated by +/- symbols and direction of arrows marked on battery until it's in place.
- Battery Gauge: Please refer to diagram.
- Remove Battery: Open cap to take battery out.

### 3. Charging




- Charging can be done by either connecting SJ4000 to computer or power adaptor.
- Charge SJ4000 on vehicle by connecting it to car charger.
- SJ4000 can record video while charging (Switch into Vehicle-mounted Mode in "Menu")
- Charging of SJ4000 can be done even when it's powered off.

### 4. Switching camera on and off

- Press and hold power switch for 3 to 5 seconds to turn it on / off.
- Switch it on and off by turning display screen on and off.



### 5. Mode Switching

Switch between video recording / photo shooting / playback / menu by pressing "Power On-Off" button.

 recording mode, while  photo shooting mode. Symbols are displayed on top of screen.  Refers to the function of video playback, and the last one is system settings.

### 6. How to record videos and configure recording setting

#### 1. Video Recording

Switch to recording mode and there'll be an  icon in the upper left corner of the screen. Press OK to start recording and the  icon in the upper left corner will start to flash. Press "OK" again if you want to stop and the icon will disappear.

#### 2. Photo shooting & Settings


Switch the camera on and press "Mode" to select "Photo shooting Mode", there'll be an  icon in the upper left corner of display screen and the camera is in

photo shooting mode. Press "OK" to take photos.

Shooting Pattern: Single shot / Self-timer (2s/5s/10s) / Continuous Shooting

### 3. File Storage & Playing

After you are done recording, use a USB cable to export the videos onto a computer to play. Or you can take the Micro SD card out and access the image data with a card reader.

Liquid Crystal Display (LCD)	1.5LTPS
Lens	170°A+ HD wide-angle lens
Language Options	English / German / French / Spanish / Italian / Portuguese / Chinese Traditional / Chinese Simplified / Japanese / Russian
Resolution of Videos Recorded	080P (1920*1080) 30FPS 720P (1280*720) 60FPS VGA (848*480) 60FPS QVGA (640*480) 60FPS
Video Format	MOV
Compressed Format of Videos	H.264
Resolution of Photos	12M / 8M / 5M
Storage	Micro SD
Shooting Mode	Single Shot / Self-timer (2s / 5s / 10s / Continuous Shooting)
Frequency of Optical Source	50Hz / 60Hz
USB Interface	USB2.0
Power Source Interface	5V1A
Battery Capacity	900MAH
Power Dissipation	400mA@4.2V
Recording Time	1080P/ About 70 minutes
Charging Time	About 3hours
Operating System (OS)	Windows XP/VistaorAbove/Win7/Mac os
Dimension	59.27*41.13*29.28

**Note:** Specifications could be subject to modification due to upgrading or updating. Please regard the actual product as the standard form.

## Optional accessories



Car bracket



HDMI outlet line



waist bandage



car charger