



ENGLISH

PERSONAL SCALE VT-8051 W
The unit is used for weight measuring.

- Description**
1. Body
 2. Display
 3. Measurement unit selection button
 4. Battery compartment lid

Recommendations for customer

ATTENTION!

Before using the unit, read these instructions carefully and keep them for further reference.

Use the unit according to its intended purpose only, as it is stated in this user manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

- Handle your scale with care, as it is a precision instrument, do not subject it to high or low temperatures, high humidity, never expose it to direct sunlight and do not drop it.
- Use the scale away from heating units.
- Avoid getting of liquids into the scale body, this appliance is not waterproof. Do not leave or use the scale in a room with high humidity (above 80%), make sure that the scale does not come into contact with water or other liquids as this may cause failure of scale indication or its damage.

- Remove the protective film from the scale before use to avoid static effect.
- Place the scale on a flat, dry and non-slip surface.
- Do not use the scale on carpets or rugs.
- Do not step on the scale with wet feet or if the scale surface is damp. You can slip and get injured.

- Be careful while stepping on the scale: step on the scale first with one foot; make sure that the scale is steady and only then step on it with both feet.
- Step on the scale and dispose your weight evenly. Stand still while weighing. Do not jump on the scale surface.
- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery in time.
- This unit is not intended for usage by children under 8 years of age.
- This unit is not intended for usage by people (including children over 8) with physical, neural and mental disorders or with insufficient experience or knowledge. Such persons may use this unit only if they are under supervision of a person who is responsible for their safety and if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper usage.
- Do not leave children unattended to prevent using the unit as a toy.
- For children safety reasons, do not leave polyethylene bags used as packaging unattended.

- Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Transport the unit in the original package only.
- Keep the scale away from children in a dry cool place.
- Do not repair the unit by yourself. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.

- **Recommendations**
- Weigh yourself at one and the same time of the day.
- 2-3 hours should pass after taking a meal.
- Place the scale on one and the same place to get the most precise result.

- **Attention!**
- If an indication «Err» appears on the display, it means that the scale is overloaded. Step off the scale immediately to avoid its damage.

- **Measurement unit selection**
- The weight measurement unit selection button (3) is located on the bottom of the scale.
- Select kilograms («kg»), pounds («lb») or stones («st») as measurement units pressing the button.

- **Weight measurement**
- Install the scale on a flat stable surface.
- The unit is switched on when you step on it.
- The symbols «0.0 kg», «0.0 lb» or «0.0 st» appear on the display (2) depending on the selected measurement units.
- Step on the scale and stand still. The weight indications on the display (2) will flash during weighing. Wait until the indications stop flashing.
- Your weight will be shown on the display for about 10 seconds, and then the unit will be switched off automatically.

- **Notes**
- If the scale works improperly, try switching the power off; to do this, open the battery compartment lid (4) and remove the battery. After some time install the battery back in its place.
- Refer to authorized service centers for maintenance.

- **Cleaning and care**
- Wipe the scale with a soft slightly damp cloth.
- Never use abrasives or solvents.
- Do not immerse the scale into water or any other liquids, do not wash it in a dishwashing machine.
- Keep the scale away from children in a dry cool place.

- **Delivery set**
- 1. Scale – 1 pc.
- 2. CR2032 battery – 1 pc.
- 3. Instruction manual – 1 pc.

- **Technical specifications**
- Power supply: CR2032 battery, 3 V
- Maximum weight: 150 kg

- *The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.*

- **Unit operating life is 3 years**

- **Guarantee**
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

- **THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY**

- **USING THE SCALE**
- After unit transportation or storage at low temperature, it is necessary to keep it for at least two hours at room temperature before switching on.
- Wipe the scale with a soft slightly damp cloth.

- **Battery installation**
- Unpack the scale, remove any stickers that can prevent unit operation.

- Remove the battery compartment lid (4) and insert a «CR2032» battery (supplied with the unit), following the polarity.
- Install the battery compartment lid (4) back to its place.

- **Note:**
- If there is an isolation insert in the battery compartment, open the battery compartment lid (4), remove the isolation insert and install the battery compartment lid (4) back to its place.

- **Battery replacement**
- If the image on the display (2) becomes less sharp, replace the battery.
- Open the battery compartment lid (4), replace the old «CR2032» battery with a new «CR2032» battery, strictly following the polarity, and close the battery compartment lid (4).
- If you are not going to use the scale for a long time, remove the battery from the battery compartment.

- **Recommendations**
- Weigh yourself at one and the same time of the day.
- 2-3 hours should pass after taking a meal.
- Place the scale on one and the same place to get the most precise result.

- **Attention!**
- If an indication «Err» appears on the display, it means that the scale is overloaded. Step off the scale immediately to avoid its damage.

- **Measurement unit selection**
- The weight measurement unit selection button (3) is located on the bottom of the scale.
- Select kilograms («kg»), pounds («lb») or stones («st») as measurement units pressing the button.

- **Weight measurement**
- Install the scale on a flat stable surface.
- The unit is switched on when you step on it.
- The symbols «0.0 kg», «0.0 lb» or «0.0 st» appear on the display (2) depending on the selected measurement units.
- Step on the scale and stand still. The weight indications on the display (2) will flash during weighing. Wait until the indications stop flashing.
- Your weight will be shown on the display for about 10 seconds, and then the unit will be switched off automatically.

- **Notes**
- If the scale works improperly, try switching the power off; to do this, open the battery compartment lid (4) and remove the battery. After some time install the battery back in its place.
- Refer to authorized service centers for maintenance.

- **Cleaning and care**
- Wipe the scale with a soft slightly damp cloth.
- Never use abrasives or solvents.
- Do not immerse the scale into water or any other liquids, do not wash it in a dishwashing machine.
- Keep the scale away from children in a dry cool place.

- **Delivery set**
- 1. Scale – 1 pc.
- 2. CR2032 battery – 1 pc.
- 3. Instruction manual – 1 pc.

- **Technical specifications**
- Power supply: CR2032 battery, 3 V
- Maximum weight: 150 kg

- *The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.*

- **Unit operating life is 3 years**

- **Guarantee**
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

- **THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY**

- **USING THE SCALE**
- After unit transportation or storage at low temperature, it is necessary to keep it for at least two hours at room temperature before switching on.
- Wipe the scale with a soft slightly damp cloth.

- **Battery installation**
- Unpack the scale, remove any stickers that can prevent unit operation.

- Remove the battery compartment lid (4) and insert a «CR2032» battery (supplied with the unit), following the polarity.
- Install the battery compartment lid (4) back to its place.

- **Note:**
- If there is an isolation insert in the battery compartment, open the battery compartment lid (4), remove the isolation insert and install the battery compartment lid (4) back to its place.

- **Battery replacement**
- If the image on the display (2) becomes less sharp, replace the battery.
- Open the battery compartment lid (4), replace the old «CR2032» battery with a new «CR2032» battery, strictly following the polarity, and close the battery compartment lid (4).
- If you are not going to use the scale for a long time, remove the battery from the battery compartment.

- **Recommendations**
- Weigh yourself at one and the same time of the day.
- 2-3 hours should pass after taking a meal.
- Place the scale on one and the same place to get the most precise result.

- **Attention!**
- If an indication «Err» appears on the display, it means that the scale is overloaded. Step off the scale immediately to avoid its damage.

- **Measurement unit selection**
- The weight measurement unit selection button (3) is located on the bottom of the scale.
- Select kilograms («kg»), pounds («lb») or stones («st») as measurement units pressing the button.

- **Weight measurement**
- Install the scale on a flat stable surface.
- The unit is switched on when you step on it.
- The symbols «0.0 kg», «0.0 lb» or «0.0 st» appear on the display (2) depending on the selected measurement units.
- Step on the scale and stand still. The weight indications on the display (2) will flash during weighing. Wait until the indications stop flashing.
- Your weight will be shown on the display for about 10 seconds, and then the unit will be switched off automatically.

- **Notes**
- If the scale works improperly, try switching the power off; to do this, open the battery compartment lid (4) and remove the battery. After some time install the battery back in its place.
- Refer to authorized service centers for maintenance.

- **Cleaning and care**
- Wipe the scale with a soft slightly damp cloth.
- Never use abrasives or solvents.
- Do not immerse the scale into water or any other liquids, do not wash it in a dishwashing machine.
- Keep the scale away from children in a dry cool place.

- **Delivery set**
- 1. Scale – 1 pc.
- 2. CR2032 battery – 1 pc.
- 3. Instruction manual – 1 pc.

- **Technical specifications**
- Power supply: CR2032 battery, 3 V
- Maximum weight: 150 kg

- *The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.*

- **Unit operating life is 3 years**

- **Guarantee**
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

- **THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY**

- **USING THE SCALE**
- After unit transportation or storage at low temperature, it is necessary to keep it for at least two hours at room temperature before switching on.
- Wipe the scale with a soft slightly damp cloth.

- **Battery installation**
- Unpack the scale, remove any stickers that can prevent unit operation.

- Remove the battery compartment lid (4) and insert a «CR2032» battery (supplied with the unit), following the polarity.
- Install the battery compartment lid (4) back to its place.

- **Note:**
- If there is an isolation insert in the battery compartment, open the battery compartment lid (4), remove the isolation insert and install the battery compartment lid (4) back to its place.

- **Battery replacement**
- If the image on the display (2) becomes less sharp, replace the battery.
- Open the battery compartment lid (4), replace the old «CR2032» battery with a new «CR2032» battery, strictly following the polarity, and close the battery compartment lid (4).
- If you are not going to use the scale for a long time, remove the battery from the battery compartment.

- **Recommendations**
- Weigh yourself at one and the same time of the day.
- 2-3 hours should pass after taking a meal.
- Place the scale on one and the same place to get the most precise result.

- **Attention!**
- If an indication «Err» appears on the display, it means that the scale is overloaded. Step off the scale immediately to avoid its damage.

- **Measurement unit selection**
- The weight measurement unit selection button (3) is located on the bottom of the scale.
- Select kilograms («kg»), pounds («lb») or stones («st») as measurement units pressing the button.

- **Weight measurement**
- Install the scale on a flat stable surface.
- The unit is switched on when you step on it.
- The symbols «0.0 kg», «0.0 lb» or «0.0 st» appear on the display (2) depending on the selected measurement units.
- Step on the scale and stand still. The weight indications on the display (2) will flash during weighing. Wait until the indications stop flashing.
- Your weight will be shown on the display for about 10 seconds, and then the unit will be switched off automatically.

- **Notes**
- If the scale works improperly, try switching the power off; to do this, open the battery compartment lid (4) and remove the battery. After some time install the battery back in its place.
- Refer to authorized service centers for maintenance.

- **Cleaning and care**
- Wipe the scale with a soft slightly damp cloth.
- Never use abrasives or solvents.
- Do not immerse the scale into water or any other liquids, do not wash it in a dishwashing machine.
- Keep the scale away from children in a dry cool place.

- **Delivery set**
- 1. Scale – 1 pc.
- 2. CR2032 battery – 1 pc.
- 3. Instruction manual – 1 pc.

- **Technical specifications**
- Power supply: CR2032 battery, 3 V
- Maximum weight: 150 kg

- *The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.*

DEUTSCH

PERSONENWAAGE VT-8051 W
Das Gerät wird zum Abwiegen verwendet.

- Beschreibung**
1. Gehäuse
 2. Bildschirm
 3. Wahltaсте der Gewichtseinheiten
 4. Batteriefachdeckel

Betriebsanleitung

ACHTUNG!

Vor der ersten Inbetriebnahme des Elektrogeräts lesen Sie diese Bedienungsanleitung aufmerksam durch und bewahren Sie sie für weitere Referenz auf.

Benutzen Sie das Gerät nur bestimmungsmäßig und laut dieser Bedienungsanleitung. Nicht ordnungsgemäße Nutzung des Geräts kann zu seiner Störung führen und einen gesundheitlichen oder materiellen Schaden beim Nutzer hervorrufen.

- Handle your scale with care, as it is a precision instrument, do not subject it to high or low temperatures, high humidity, never expose it to direct sunlight and do not drop it.
- Use the scale away from heating units.
- Avoid getting of liquids into the scale body, this appliance is not waterproof. Do not leave or use the scale in a room with high humidity (above 80%), make sure that the scale does not come into contact with water or other liquids as this may cause failure of scale indication or its damage.
- Remove the protective film from the scale before use to avoid static effect.
- Place the scale on a flat, dry and non-slip surface.
- Do not use the scale on carpets or rugs.
- Do not step on the scale with wet feet or if the scale surface is damp. You can slip and get injured.
- Be careful while stepping on the scale: step on the scale first with one foot; make sure that the scale is steady and only then step on it with both feet.
- Step on the scale and dispose your weight evenly. Stand still while weighing. Do not jump on the scale surface.
- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery in time.
- This unit is not intended for usage by children under 8 years of age.
- This unit is not intended for usage by people (including children over 8) with physical, neural and mental disorders or with insufficient experience or knowledge. Such persons may use this unit only if they are under supervision of a person who is responsible for their safety and if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper usage.
- Do not leave children unattended to prevent using the unit as a toy.
- For children safety reasons, do not leave polyethylene bags used as packaging unattended.

- **Recommendations**
- Weigh yourself at one and the same time of the day.
- 2-3 hours should pass after taking a meal.
- Place the scale on one and the same place to get the most precise result.

- **Attention!**
- If an indication «Err» appears on the display, it means that the scale is overloaded. Step off the scale immediately to avoid its damage.

- **Measurement unit selection**
- The weight measurement unit selection button (3) is located on the bottom of the scale.
- Select kilograms («kg»), pounds («lb») or stones («st») as measurement units pressing the button.

- **Weight measurement**
- Install the scale on a flat stable surface.
- The unit is switched on when you step on it.
- The symbols «0.0 kg», «0.0 lb» or «0.0 st» appear on the display (2) depending on the selected measurement units.
- Step on the scale and stand still. The weight indications on the display (2) will flash during weighing. Wait until the indications stop flashing.
- Your weight will be shown on the display for about 10 seconds, and then the unit will be switched off automatically.

- **Notes**
- If the scale works improperly, try switching the power off; to do this, open the battery compartment lid (4) and remove the battery. After some time install the battery back in its place.
- Refer to authorized service centers for maintenance.

- **Cleaning and care**
- Wipe the scale with a soft slightly damp cloth.
- Never use abrasives or solvents.
- Do not immerse the scale into water or any other liquids, do not wash it in a dishwashing machine.
- Keep the scale away from children in a dry cool place.

- **Delivery set**
- 1. Scale – 1 pc.
- 2. CR2032 battery – 1 pc.
- 3. Instruction manual – 1 pc.

- **Technical specifications**
- Power supply: CR2032 battery, 3 V
- Maximum weight: 150 kg

- *The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.*

- **Unit operating life is 3 years**

- **Guarantee**
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

- **THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY**

- **USING THE SCALE**
- After unit transportation or storage at low temperature, it is necessary to keep it for at least two hours at room temperature before switching on.
- Wipe the scale with a soft slightly damp cloth.

- **Battery installation**
- Unpack the scale, remove any stickers that can prevent unit operation.

- Remove the battery compartment lid (4) and insert a «CR2032» battery (supplied with the unit), following the polarity.
- Install the battery compartment lid (4) back to its place.

- **Note:**
- If there is an isolation insert in the battery compartment, open the battery compartment lid (4), remove the isolation insert and install the battery compartment lid (4) back to its place.

- **Battery replacement**
- If the image on the display (2) becomes less sharp, replace the battery.
- Open the battery compartment lid (4), replace the old «CR2032» battery with a new «CR2032» battery, strictly following the polarity, and close the battery compartment lid (4).
- If you are not going to use the scale for a long time, remove the battery from the battery compartment.

- **Recommendations**
- Weigh yourself at one and the same time of the day.
- 2-3 hours should pass after taking a meal.
- Place the scale on one and the same place to get the most precise result.

- **Attention!**
- If an indication «Err» appears on the display, it means that the scale is overloaded. Step off the scale immediately to avoid its damage.

- **Measurement unit selection**
- The weight measurement unit selection button (3) is located on the bottom of the scale.
- Select kilograms («kg»), pounds («lb») or stones («st») as measurement units pressing the button.

- **Weight measurement**
- Install the scale on a flat stable surface.
- The unit is switched on when you step on it.
- The symbols «0.0 kg», «0.0 lb» or «0.0 st» appear on the display (2) depending on the selected measurement units.
- Step on the scale and stand still. The weight indications on the display (2) will flash during weighing. Wait until the indications stop flashing.
- Your weight will be shown on the display for about 10 seconds, and then the unit will be switched off automatically.

- **Notes**
- If the scale works improperly, try switching the power off; to do this, open the battery compartment lid (4) and remove the battery. After some time install the battery back in its place.
- Refer to authorized service centers for maintenance.

- **Cleaning and care**
- Wipe the scale with a soft slightly damp cloth.
- Never use abrasives or solvents.
- Do not immerse the scale into water or any other liquids, do not wash it in a dishwashing machine.
- Keep the scale away from children in a dry cool place.

- **Delivery set**
- 1. Scale – 1 pc.
- 2. CR2032 battery – 1 pc.
- 3. Instruction manual – 1 pc.

- **Technical specifications**
- Power supply: CR2032 battery, 3 V
- Maximum weight: 150 kg

- *The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.*

- **Unit operating life is 3 years**

- **Guarantee**
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

- **THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY**

- **USING THE SCALE**
- After unit transportation or storage at low temperature, it is necessary to keep it for at least two hours at room temperature before switching on.
- Wipe the scale with a soft slightly damp cloth.

- **Battery installation**
- Unpack the scale, remove any stickers that can prevent unit operation.

- Remove the battery compartment lid (4) and insert a «CR2032» battery (supplied with the unit), following the polarity.
- Install the battery compartment lid (4) back to its place.

- **Note:**
- If there is an isolation insert in the battery compartment, open the battery compartment lid (4), remove the isolation insert and install the battery compartment lid (4) back to its place.

- **Battery replacement**
- If the image on the display (2) becomes less sharp, replace the battery.
- Open the battery compartment lid (4), replace the old «CR2032» battery with a new «CR2032» battery, strictly following the polarity, and close the battery compartment lid (4).
- If you are not going to use the scale for a long time, remove the battery from the battery compartment.

- **Recommendations**
- Weigh yourself at one and the same time of the day.
- 2-3 hours should pass after taking a meal.
- Place the scale on one and the same place to get the most precise result.

- **Attention!**
- If an indication «Err» appears on the display, it means that the scale is overloaded. Step off the scale immediately to avoid its damage.

- **Measurement unit selection**
- The weight measurement unit selection button (3) is located on the bottom of the scale.
- Select kilograms («kg»), pounds («lb») or stones («st») as measurement units pressing the button.

- **Weight measurement**
- Install the scale on a flat stable surface.
- The unit is switched on when you step on it.
- The symbols «0.0 kg», «0.0 lb» or «0.0 st» appear on the display (2) depending on the selected measurement

ҚАЗАҚША
ЕДЕНГЕ ҚОЯТЫН ТАРАЗЫ VT-8051 W <p>Салмақты анықтау үшін құрылғыны пайдаланыңыз.</p>
Сипаттамасы <ol style="list-style-type: none">Корпусы Дисплей Өлшеу бірліктерін таңдау батырмасы Батарейлық бөлік қапағы
Тұтынушыға ұсыныстар
НАЗАР АУДАРЫҢЫЗ! <p>Электроприборды пайдаланбас бұрын, осы пайдалану нұсқаулығын мұқият оқып шығыңыз да, оны анықтамалық материал ретінде пайдалану үшін сақтап қойыңыз.</p> <p>Құрылғыны осы нұсқаулықта баяндалғандай тікелей мақсаты бойынша ғана пайдаланыңыз. Құрылғыны дұрыс пайдаланбау оның бұзылуына, тұтынушыға немесе оның мүлгіне зиян келтіруіне өкелуі мүмкін.</p> <ul style="list-style-type: none">Кез- келген өлшейтін аспапты сияқты, таразыны ұқыпты пайдаланыңыз, оған жоғары немесе төмен температуралардың, жоғары ылғалдылықтың әсерін тигізбеңіз, тікелей күн сәулелерінің әсеріне жол бермеңіз, құрылғыны құлатпаңыз және соқпаңыз. Таразыны қыздырғыш аспаптардан алшақ жерде пайдаланыңыз. Таразы корпусының ішіне сұйықтың тиюіне жол бермеңіз, берілгент құрылғы су өтейтін болып есептелмейді. Таразыны ылғалдылығы жоғары (80% көп) жерлерде қалдыруға немесе пайдалануға тыйым салынады, таразы көрсеткіштерінің дұрыстығы бұзылуына немесе оның істен шығуына жол бермеу үшін, құрылғының сумен немесе басқа сұйықтықтармен жанасуына жол бермеңіз. Пайдалану алдында статикалық эффект пайда болмауы үшін таразыдан қорғаныс пленканы жойыңыз. Таразыны тегіс, құрғақ және тайғақ емес жерге орналастырыңыз. Таразыны кілемнің немесе кілем төсемдерінің үстінде қолданбаңыз. Таразыға суланған аяқтармен немесе таразының дымқыл бетіне тұрмаңыз. Сіз тайып құлап, жараяқтанып қалуыңыз мүмкін. Таразыға тұратын кезде абай болыңыз: таразының үстіне алдымен бір аяғыңызбен тұрыңыз, оның тұрақтылығына көз жеткізіп алғаннан кейін ғана екінші аяғыңызды қойыңыз. Таразының үстіне шығып, өз салмағыңызды біркелкі етіп ұстаныз. Таразыға өлшеу кезінде қозғалмай тұрыңыз. Таразының үстінде секіруге тыйым салынады. Сіз таразыны ұзақуақыт аралығында пайдаланбайтін болсаңыз, онда батареялі бөліктен қуат элементін алып тастау қажет. Қуат элементін орнатқан кезде белгілеуге сәйкес өрістілігін қатаң сақтаңыз. Қуат элементін уақытылы ауыстырып отырыңыз. Бұл құрылғы 8 жастан төменгі балалардың пайдалануына арналмаған. Бұл прибор жеке мүмкіншілігі шектеулі, жүйке, психикасы ауыратын немесе білімі жеткіліксіз адамдарға (8 жастан жоғары балаларды қоса алғанда) пайдалануға арналмаған. Бұл адамдар тек өздерінің қауіпсіздіктері үшін жауап беретін тұлғаның қадағалауымен болса, сондай-ақ өздеріне құрылғыны қауіпсіз пайдалану және дұрыс пайдаланбаған жағдайда орын алуы мүмкін қауіпті жағдайлар туралы тиісті және түсінікті нұсқаулар берілген болса осы приборды пайдалана алады. Балалардың құрылғыны ойыншық ретінде пайдалануына жол бермес үшін, оларды қадағалап отырыңыз. Балалардың қауіпсіздігін қамтамасыз ету мақсатында қаптама ретінде пайдаланылатын полиэтилен қапшықтарды қараусыз қалдырмаңыз. <p>Назар аударыңыз! Балаларға полиэтилен пакеттермен немесе қаптама үлдірмен ойнауға рұқсат бермеңіз. Тұншығу қаупі!</p> <ul style="list-style-type: none">Таразыны тек зауыттық қаптамасында тасымалдаңыз. Таразыны құрғақ, салқын, балалардың қолдары жетпейтін жерде сақтаңыз. Аспапты өз бетіңізбен жөндеуге тыйым салынады. Өздігіңізден құрылғыны бөлшектемеңіз, кез келген ақау шыққан жағдайда, байланысу мекенжайлары бойынша келілдеме талонында көрсетілген кез келген авторланған (уәкілетті) сервистік орталыққа, және www.vitek.ru сайтына жүгініңіз.
ҚҰРЫЛҒЫ ТЕК ТҰРМЫСТЫҚ ЖАҒДАЙДА ПАЙДАЛАНУҒА АРНАЛҒАН
ТАРАЗЫНЫ ПАЙДАЛАНУ <p>Құрылғыны төмен температурада сақтағаннан кейін немесе тасымалдағаннан кейін оны кемінде екі сағат бөлме температурасында ұстау керек.</p> <ul style="list-style-type: none">Таразыны жұмсақ, сәл ылғал матамен сүртіңіз.

УКРАЇНСЬКА
ВАГИ ПІДЛОГОВІ VT-8051 W <p>Пристрій використовується для визначення ваги.</p>
Опис <ol style="list-style-type: none">Корпус Дисплей Кнопка вибору одиниці вимірювання Кришка батарейного відсіку
Рекомендаціі споживачу
УВАГА! <p>Перед початком експлуатаціі електроприладу уважно прочитайте дійсну інструкцію і збережіть її для використання в якості довідкового матеріалу.</p> <p>Використовуйте пристрій лише по його прямому призначенню, як викладено в даній інструкції. Неправильне поводження з пристроєм може привести до його поломки, спричинення шкоди користувачеві або його майну.</p> <ul style="list-style-type: none">Поводьтеся з вагами акуратно, як з будь-яким вимірювальним приладом, не піддавайте ваги дії високих або низьких температур, підвищеної вологості, не допускайте дії прямих сонячних променів і не упукайте пристрій. Використовуйте ваги далеко від нагрівальних приладів. Не допускайте попадання рідини всередину корпусу ваг, даний пристрій не є водонепроникним. Забороняється залишати або використовувати ваги в місцях з підвищеною вологістю (більше 80%), не допускайте контакту корпусу ваг з водою або іншими рідинами, щоб уникнути порушення правильності показань ваг або виходу їх з ладу. Перед використанням видаліте з ваг захисний плівку щоб уникнути виникнення статичного ефекту. Розміщуйте ваги на рівній, сухій і неслизькій поверхні. Не користуйтеся вагами на килимах або килимових покриттях. Не вставайте на ваги мокрими ногами або якщо поверхня ваг волога. Ви можете посковзнутися і отримати травму. Дотримуйтеся обережності, коли встаєте на ваги: встаньте на ваги спочатку однією ногою, переконайтеся в їх стійкості і тільки тоді поставте другу ногу. Встаньте на ваги і рівномірно розподілите свою вагу. Під час процесу зважування стійте на вагах непорушно. Забороняється стрибати на поверхні ваг. Якщо ви не користуватиметесь вагами протягом тривалого періоду часу, необхідно витягнути елемент живлення з батареїного відсіку. При установці елементу живлення строго дотримуйтеся полярності відповідно до позначень. Своєчасно робите заміну елементу живлення. Даний пристрій не призначений для використання дітьми молодше 8 років. Цей пристрій не призначений для використання людьми (включаючи дітей старше 8 років) з фізичними, нервовими, психічними відхиленнями або без достатнього досвіду і знань. Використання приладу такими особами допускається лише у тому випадку, якщо вони знаходяться під наглядом особи, що відповідає за їх безпеку, за умов